

INSTALLATION



1. Simply remove the plug from the bottom of the oil sump and install the drain valve in the port. Wrench torque carefully. Safety wire valve to sump.



2. Take hold of the knurled nut and with a combination push-twist motion, open the valve.



3. Allow the oil to drain.



4. To close, twist the knurled nut. The spring-loaded valve will automatically close.

NOTE: Verify that installation of the valve does not restrict travel of retractable landing gear. Conduct retract test if necessary. Hose may be trimmed or removed.